 


APLEX series accessories overview

Extend your automatic labelling operation

Article no.	Series	Description
1TVAPLEX4	APLEX4	APLEX4 Print & Apply System for the B-EX4T1/T2/D2 printer series. Comes standard with a 100 x 100 mm label pad. Up to 30 labels/minute. Label application with or without contact (air blow).
1TVAPLEX4 + 1TVAPLEX6KIT	APLEX6	APLEX6 Print & Apply System for the B-EX6T1/T3 printer series. Comes standard with a 148 x 200 mm label pad. Up to 20 labels/minute. Label application with or without contact (air blow).

Article no.	Accessories	Description
1TVAPLEX4LI	Light indicator	Light indicator (ready, working, error).
1TVAPLEXHD	Hand detector	Hand detector (additional operator protection system).
1TVAPLEX4IO	I/O Interface	In/Out interface to connect the APLEX4 to a PLC or other external devices.
1TVAPLEX4LP	Label pad	pad for labels up to 100 x 150 mm
1TVAPLEX4LP200		pad for labels up to 100 x 200 mm
1TVAPLEX4LR	Vacuum sensor	Detects the label is ready on label apply pad.
1TVAPLEX4PS	Proximity sensor	Detects target items to apply at variable heights.
1TVAPLEX4SC	Support column	Flexible free standing mount system for the APLEX4.
1TVAPLEX4HR	Column adjusters	Horizontal position adjuster
1TVAPLEX4VR		Vertical position adjuster (Requires the APLEX4-HR.)

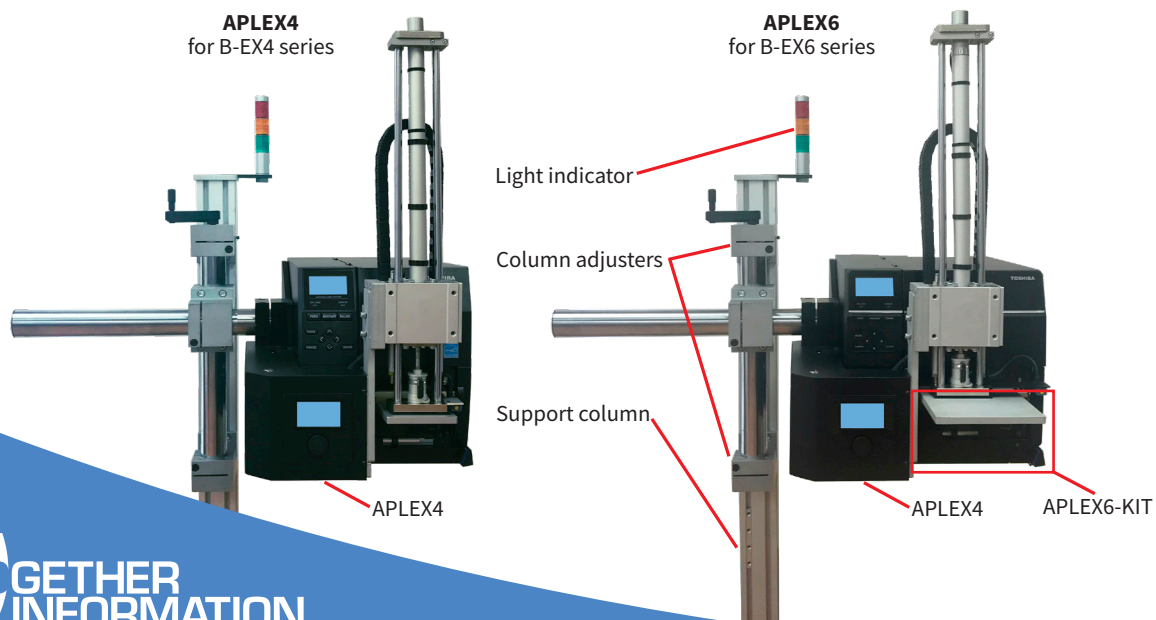

Proximity sensor (APLEX4-PS)

- Applies the label without touching the item.
- When the arm approaches the item, the sensor detects it and the APLEX4 blows the label onto the item without touching it.


Type	Pressure sensor (standard)	Proximity sensor (optional)
Contact	variable distance	n/a
Non-contact	Fixed height	Variable height

Vacuum sensor (APLEX4-LR)

- Detects the label on the pad. The sensor detects that the label is on the pad and is ready to be applied. If the label falls off, the APLEX4 gives an error and stops the apply operation.

Light indicator (APLEX4-LI)

 - Easy to see the APLEX4's condition.
- Light statuses:
 - » Green/Online
 - » Orange/Working
 - » Red/Error.

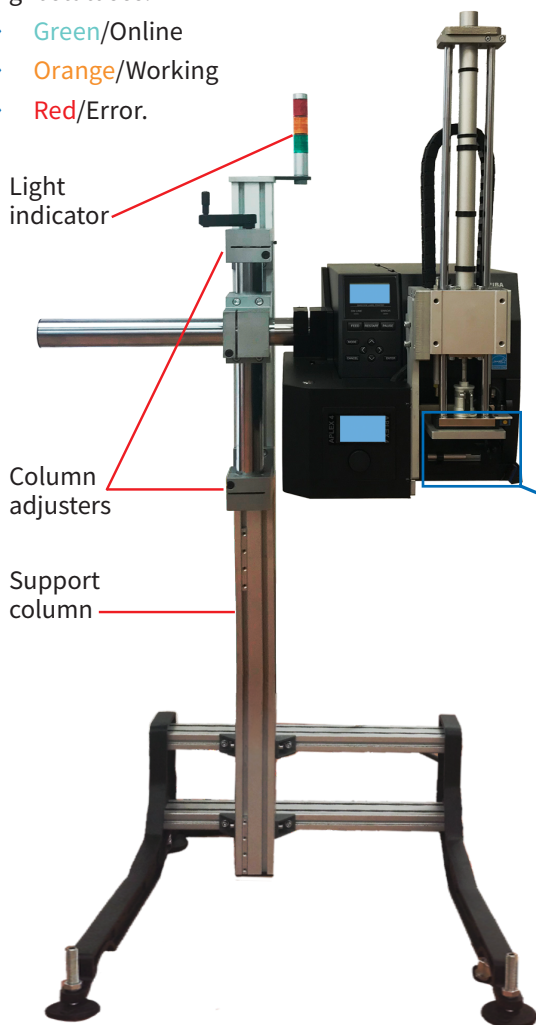

Hand detector (APLEX4-HD)

- Detects obstructions under the pad. Additional operator protection that stops operation if a hand or other object is in the front of the printer.

Label pad (APLEX4-LP/LP200)

- Need to apply labels longer than 100 mm.
- APLEX4-LP: Labels up to 100 x 150 mm
- APLEX4-LP200: Labels up to 100 x 200 mm

 
Support column

- Free standing mount for the APLEX4. Adjustable system to mount the APLEX4 different heights and orientations for applying from the top or side.

Column adjusters

- Easily adjusts the position of the APLEX4.
- Using the hand cranks easily reposition the APLEX4 horizontally and vertically (vertical option requires the APLEX4-HR to be fitted also).

Horizontal position

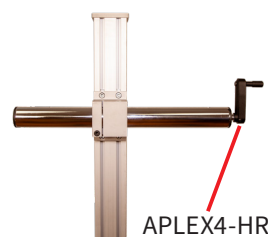

Vertical position

